


WINNARD

ECE R90 Brake Pads

Intelligent Braking - Triple Retention System

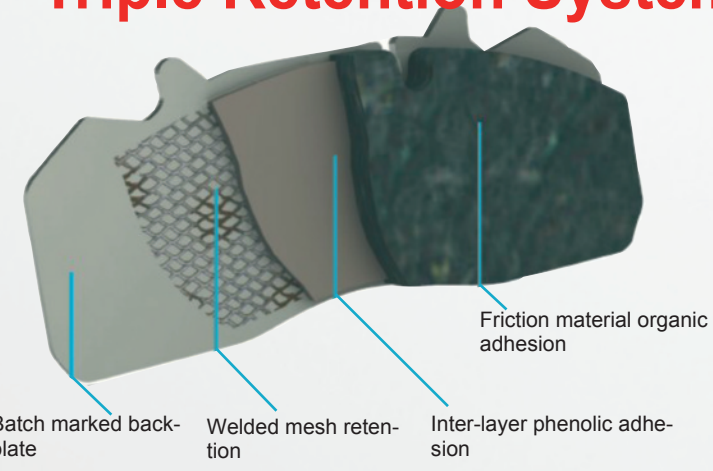

Two C.V. Material Options

1. Standard Material - IB701

Improved formulation with increased operating parameters. Smoothed torque, removed fade, increased performance whilst reducing wear. **Complete with bedding in coating.**

2. Heavy Duty Material - IB705

Heavy Duty, City Bus and High Load applications. Optimised for superb torque and very low wear characteristics. **Complete with bedding in coating.**

Part Number	WVA Number	Dimensions	Notes
WP136	WVA 29187	250 x 114 x 29	Available in Stage ² MER EX225H2 Supplied with WA251 fitting kit
WP190	WVA 29190	137 x 63 x 19	MERC Sprinter II 3.5t 06 - Front Supplied with wear lead WL085
WP523	WVA 29302	175 x 77 x 22	LUC B Frame - AWD - Optare - Volvo Fitting Kit WA233 available
WP801	WVA 29075	180 x 106 x 20	IVECC 6 Plain pads, 2 with wear leads
WP1102	WVA 29121, 29129, 29357	164 x 66 x 19.5	IVECO Daily, RENAULT Mascott WA248 Fitting kit available
WP1386	WVA 29136	176 x 87.8 x 30	MER B Duco Supplied with WA227 fitting kit
WP1557	WVA 29249	176 x 87.8 x 30	8 pads per axle set
WP137	WVA 29188	250 x 114 x 30	Available in Stage ² MER EX225H3 Supplied with WA251 fitting kit
WP192	WVA 29192	164 x 67 x 20	MERC Sprinter II 3.5t 06 - Front
WP594	WVA 29747	140 x 121 x 32	KNORR K85 8 pads per axle set
WP987	WVA 29055	176 x 83 x 22	PER 1000VG - MAN
WP1126	WVA 29122, 29033, 29065, 29067	175 x 86 x 22	Replaces WP879 BREM - LUCAS B Fitting kit available WA233 Brembo WA236 Lucas available
WP1387	WVA 29137	210 x 102.7 x 29.9	MER C Duco Supplied with WA228 fitting kit
WP1561	WVA 29246, 29245	208 x 113 x 35	Available in Stage ² Mercedes Actros SL7 Supplied with WA231 fitting kit
WP139	WVA 29162	210 x 110 x 30	WAB PAN 19-2, PAN22 Supplied with fitting kit WA254
WP200	WVA 29200	169 x 73 x 20.8	MERC Sprinter II 5t 06 - Front
WP624	WVA 29072	170 x 98 x 19	RENAULT 8 pads per axle set
WP988	WVA 29087, 29042, 29039, 29060, 29067, 29108	247 x 108.7 x 30	Available in Stage ² KNOR SB7000 Supplied with WA231 fitting kit
WP1277	WVA 29115, 29148	173 x 84 x 27	KNOR SB5000 Supplied with WA231 fitting kit
WP1388	WVA 29125	246 x 109 x 30	Available in Stage ² MER D Duco - RVI, Volvo Supplied with WA225 fitting kit
WP1562	WVA 29246	245 x 114 x 35	Available in Stage ² Mercedes Actros SM7 Supplied with WA231 fitting kit
WP119	WVA 29147 / 29181	211 x 94 x 30	HAL DB19 Caliper MKII, III, IV Supplied with WA247 fitting kit
WP131	WVA 29165	211 x 91.5 x 30	KNOR SN6000 Supplied with WA231 fitting kit
WP140	WVA 24484	166 x 67.6 x 18	Ford Transit RWD Front 06- Supplied with wear lead WL069
WP201	WVA 29201, 29217	165 x 76 x 20.5	MERC Sprinter II 5t 06 - Rear
WP733	WVA 29067	175 x 77 x 22	IVECO Eurocargo
WP1038	WVA 21576	155 x 63 x 18.7	MERC Sprinter, VW LT 96-06
WP1279	WVA 29088, 29091	174 x 89 x 26	WAB PAN 17 Supplied with fitting kit WA235
WP1389	WVA 29126	209 x 91 x 30	WAB PAN19-1, PAN19-2 Supplied with WA223 fitting kit
WP1563	WVA 29227	211 x 102 x 30	BPW TSB3709 Fitting kit WA266 available
WP125	WVA 29158, 29171	206 x 81 x 20	ISUZU NQR 1996- Supplied with shims
WP132	WVA 29167	210 x 108 x 30	Also available without the cut outs WP158 KNOR SK7000 Supplied with WA231 fitting kit
WP141	WVA 24486	123 x 54 x 17	Ford Transit Rear 06- Supplied with wear lead WL070
WP229	WVA 29229	163 x 73 x 21	IVECO Daily 06- Front
WP738	WVA 29498	192 x 114 x 20	Kassbohrer, Knorr 8 pads per axle set
WP1039	WVA 21621	140.2 x 49.5 x 16.9	MERC Sprinter, VW LT 96-06
WP1314	WVA 29124	204 x 99.5 x 27	MER DX195 Supplied with WA211 fitting kit
WP1390	WVA 29160	165 x 66 x 19.8	IVECO Daily, RVI Mascott WA249 Fitting kit available
WP1564	WVA 29228	211 x 115 x 30	BPW TSB4309 Fitting kit WA267 available
WP126	WVA 29167	206 x 75 x 20	ISUZU NKR, NPR 1998- Supplied with shims
WP133	WVA 29167	247 x 106.6 x 30	KNOR SN7000 Supplied with WA231 fitting kit
WP142	WVA 24485	165 x 65 x 18	Ford Transit FWD Front 06- Supplied with wear lead WL069
WP232	WVA 29232	141 x 73 x 21	IVECO Daily 06- Rear
WP760	WVA 29030, 29083, 29084, 29113	249 x 115 x 28	Available in Stage ² LUC D3 Supplied with WA208 fitting kit
WP1043	WVA 29076, 29153	165 x 72.3 x 20	MERC Sprinter, VW LT 96-06
WP1315	WVA 29121 / 17	165 x 66 x 17	IVECO Daily WA248 Fitting kit available
WP1404	WVA 29131	250 x 118 x 30	Available in Stage ² MER D Elsa 2 - MAN, RVI, ROR Supplied with WA230 fitting kit
WP1566	WVA 29279	218 x 108 x 31	WABCO MG22MAX Supplied with fitting kit
WP129	WVA 29141, 29119	204.5 x 98.5 x 30	WAB PAN19-2 - MAN, DAF Supplied with WA229 fitting kit
WP134	WVA 29169 / 29177	210 x 100 x 30	MER Elsa 195 Supplied with WA237 fitting kit
WP173	WVA 29173	216 x 97 x 29	Available in Stage ² MER ELSA 225-1 Supplied with fitting kit WA251
WP501	WVA 29835	175 x 85 x 22	LUC B Frame - Merc. Optare Fitting Kit WA236 available
WP770	WVA 29032	206 x 107 x 25	BEND 3700 - Iveco
WP1045	WVA 21592	154 x 52 x 18.7	MERC Sprinter, VW LT 96-06
WP1329	WVA 29089, 29095	209.5 x 91.6 x 30	KNOR SB6000 Supplied with WA231 fitting kit
WP1405	WVA 29123	109 x 63 x 20	IVECO Daily WA250 Fitting kit available
WP1567	WVA 29195	211 x 94 x 30	HALDEX SSB2220 Modul T Supplied with fitting kit
WP130	WVA 29142	204.6 x 98.5 x 30	WAB PAN19-2 - RVI Supplied with WA229 fitting kit
WP135	WVA 29151	216 x 97 x 30	MER Duco, Volvo FH, FM Supplied with WA228 fitting kit
WP174	WVA 29174	250 x 107 x 29	Available in Stage ² MER ELSA 225-3 Supplied with fitting kit WA251
WP503	WVA 29017, 29024	191 x 87 x 23	PER 456F - Avia - DAF - Iveco Supplied with wear lead
WP773	WVA 29011	241 x 125 x 25	BEND 4300 - Iveco
WP1047	WVA 29090	250 x 115.4 x 28	Available in Stage ² MER D LISA - RVI, Volvo Supplied with WA213 Fitting kit
WP1367	WVA 29120, 29143, 29185	249 x 104.2 x 30	HAL DB20, DB22 WA247 fitting kit available
WP1556	WVA 29256	176 x 95 x 32	IVECO Eurocargo 2007- WA255 fitting kit available
WP1569	WVA 29253	247 x 108.7 x 30	Available in Stage ² KNOR PROTEC S Supplied with fitting kit