


WINNARD

INSTALLATION BULLETIN FOR SCANIA REAR WHEEL HUBS FITTED WITH FAG KHM218248.218210 (FAG0017) TAPPER ROLLER BEARINGS

1. To ensure the correct operation of the bearings it is vital that inner bearing (7) & outer bearing (9) are packed with the vehicle manufacturers recommended grease.
2. The pre-load sleeve (8) **MUST** be fitted. This sleeve prevents torque being transferred to the bearing rollers. Pre-load sleeve part number: 1507770, Winnard HSK0032-1.
3. This bulletin is highlighting the importance of installing the pre-load sleeve and correctly greasing the bearings. When carrying out a hub / wheel bearing replacement it is essential to adhere to the manufacturers installation guidelines and examine the vehicles overall condition.

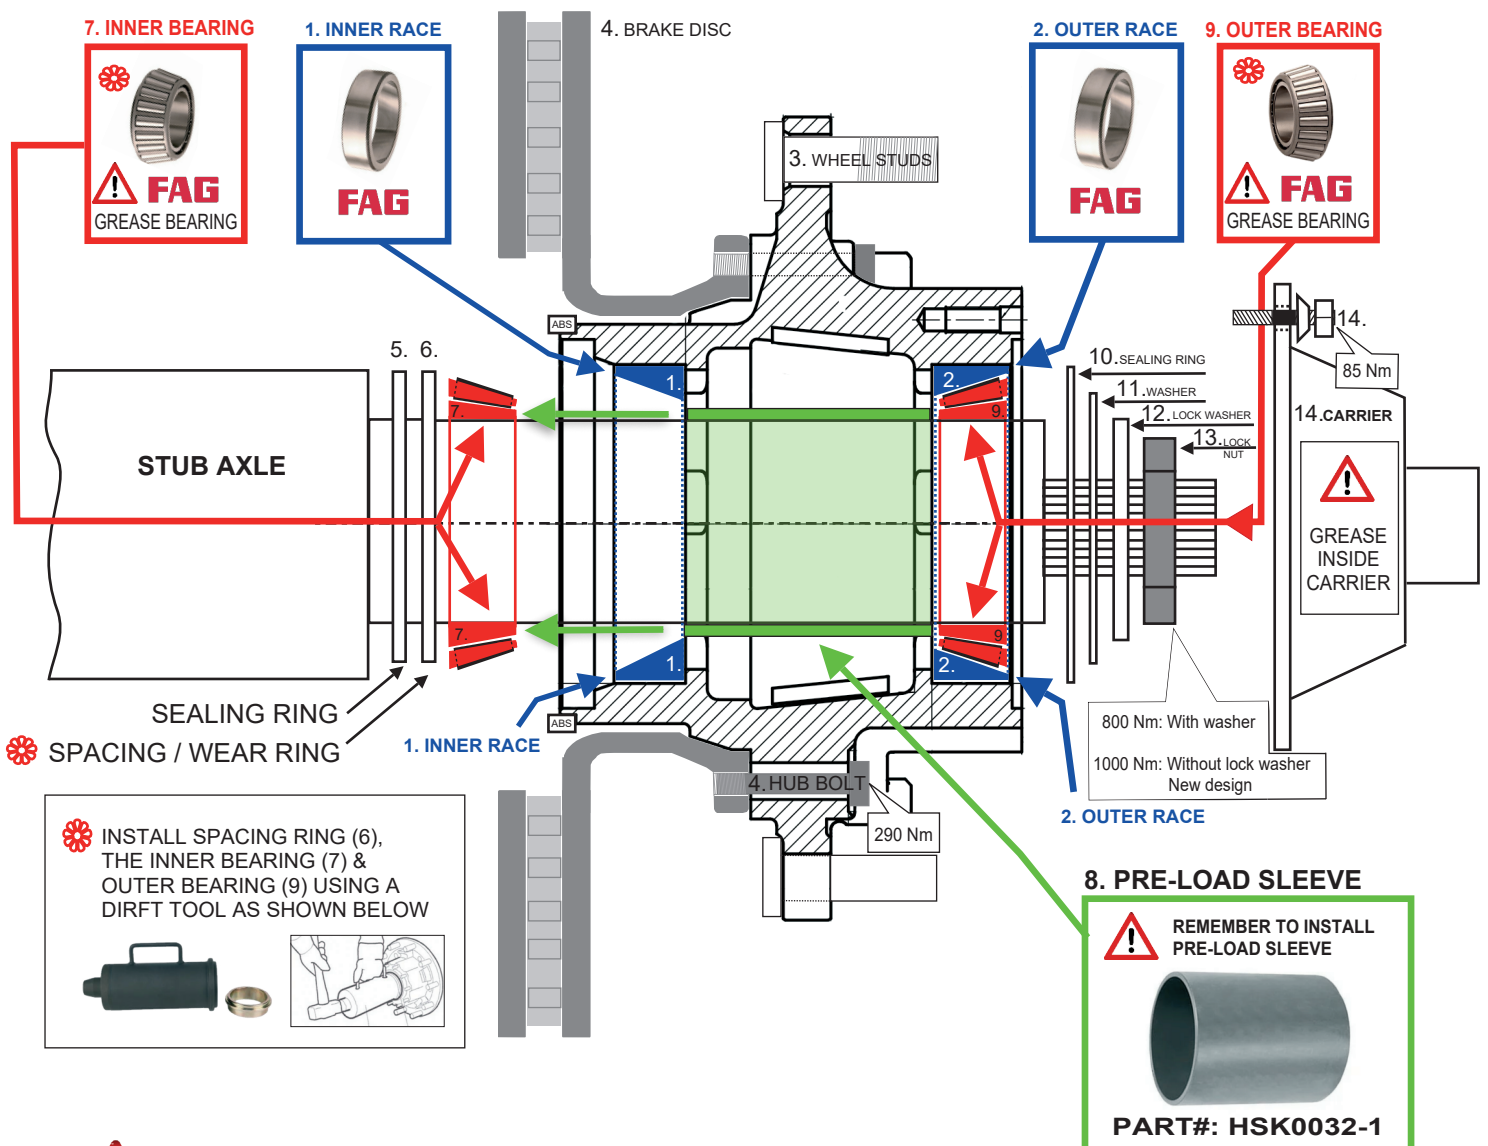

FAILURE TO FOLLOW THE INSTALLATION PROCEDURE CAN CAUSE PREMATURE BEARING FAILURE

Thos. Winnard & Sons Ltd 2023 www.winnard.co.uk
Original Equipment Manufacturers part numbers are used for reference purposes only and do not imply that their parts will be supplied.